



MAXXAIR

ROOF VENT COVER

What's Included:

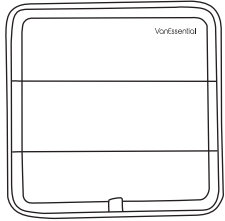

Fan Vent Cover




13X Magnets (1 spare)




Storage Sack

You Will Need:

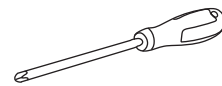


Phillips Head Screwdriver

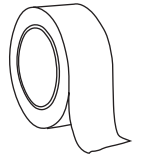


Painter's Tape


1. Using your screwdriver, remove the plastic fan/vent flange from the interior of your van. Most flanges are attached with four screws.

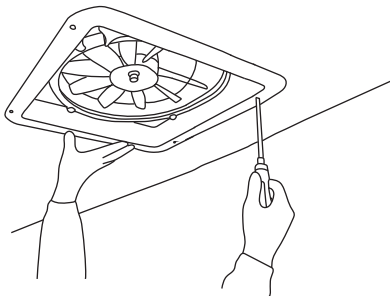


2. Place the window cover on a flat surface with the logo side facing down. Then, Set the flange on top of the cover with the flat surface facing down.

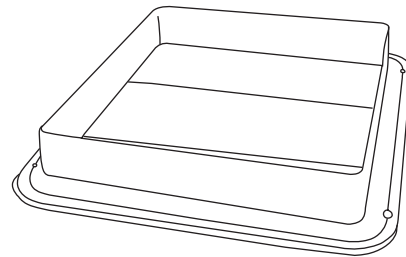

3. Place the included magnets along the edge of the flange. The magnets will snap into place aligning with the magnets inside the fan cover.

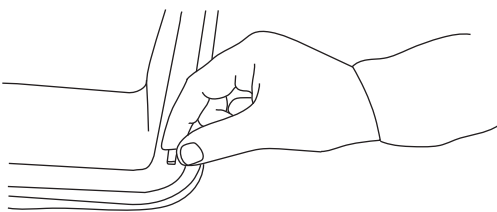

4. Use painter's tape to secure the magnets in place.

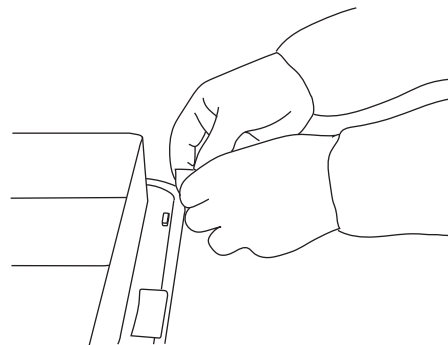

5. Using your screwdriver, re-install the flange to the roof of your van. Your vent cover should now snap easily into place. You can fold the vent cover on the flange when desired. The magnets will hold it secure.



6. Step back and admire your work!

